PRODUCT DATA SHEET DFS-2/3

DigiFlow Flowmeters





DESCRIPTION

The Digiflow DFS-2/3 flowmeters have specifically been developed for use in wide range of applications, such as (fine) chemicals, water treatment, agriculture, food processing, paper processing and other end-use/OEM applications.

This flowmeter is suitable for various mid- to long-terms use. The flowmeter design makes it an integral component of systems designed for accurate monitoring or flow control of liquids.

ADVANTAGES

- · Easy and quick installation of rotor assembly
- Permits continuous feedback during flow process of quantity dosed
- Flowmeter control system permits easy adjustment of different quantities
- · Wetted surfaces of FDA approved materials




DFS-2 and DFS-3 models

DESIGN FEATURES

- Suitable for flows ranging from 0.07 25 L/min (.02 6.6 GPM)
- · Accuracy within 0.5%
- Wetted parts and housing of high quality polymers
- · Low pressure drops
- · Ultra-low friction bearings yielding long life
- · High chemical resistance
- Turn down ratios of up 64:1
- Infrared signal detection
- Resolution of up to 65,000 pulses/L (227,100/gallon)

PRINCIPLE OF OPERATIONS

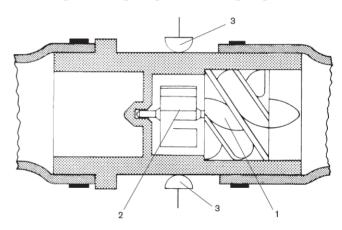

The fluid flows through the meter, first passing the fixed worm (1) causing a spiral flow which, in turn, spins the rotor (2) on a virtually frictionless bearing. The rotor blades interrupt an infrared beam (3), thus generating a square wave digital output signal.

The rotor is the only moving part. Due to its light weight and the helical flow pattern, the rotor has a minimum response time, resulting in very high resolution and accuracy, linearity, and repeatability.

DFS meters can be mounted in any position and do not require flow straighteners or other specialized tools.

SYSTEMS & APPLICATIONS

The DFS flow meters can be connected with a controller (stand alone, or interfaced with process control). The data generated can be used to control flow processes (filtration, reaction, extraction and more). Monitoring of dosing operations (volume) control is also possible. The sensors are frequently used in biopharma and medical, devices but can also be used in dispensing and filling operations (beverages, fuels, water, and more).



DigiFlow Flowmeters






SPECIFICATIONS

Specifications	DFS-2	DFS-3
Media	liquids	liquids
Flow range	0.07 - 4.5 L/m (.02 - 1.2 GPM)	0.66 - 25 L/m (.17 - 6.6 GPM)
Turndown ratio	64:1	38:1
Accuracy	± 0.5% (of actual flow reading)	± 0.5% (of actual flow reading)
Linearity deviation	0.5%	0.5%
Repeatability	< 0.15%	< 0.10%
Average K-factor	65,000 pulses/L (246,000 pulses/Gal.)	4,400 pulses/L (16,650 pulses/Gal.)
Temperature range		
Operational	-20°C to +85°C (-4°F to +185°F)	-20°C to +85°C (-4°F to +185°F)
Static	-20°C to +130°C (-4°F to +266°F)	-20°C to +130°C (-4°F to +266°F)
Viscosity range	0.8 - 10 cSt (0.8 - 10 mm²/s)	0.8 - 15 cSt (0.8 - 15 mm ² /s)
Max. pressure	50 bar (710 PSIG)	50 bar (710 PSIG)
Pressure drop	0.2 bar @ 1 L/m (2.9 PSI @ .25 GPM)	0.2 bar @ 5 L/m (2.9 PSI @ 1.3 GPM)
Power supply	5 VDC, 12 - 36 mAmp	5 VDC, 12 - 36 mAmp
Output signal	5 VDC square wave	5 VDC square wave
Materials		
Rotor assembly	PVDF	PVDF
Housing	PVDF	PVDF
O-rings	Fluorine rubber	FKM
Electrical lead	1 meter (39") in length	1 meter (39") in length
Dimensions		
Length	63.3 mm (2.5")	74 mm (2.91")
Diameter	21 mm (0.83")	44 mm (1.73")
Connections	7 mm (9/32") hose barb fitting	3/8" NPT of 3/8" BSP

WIRING CHART

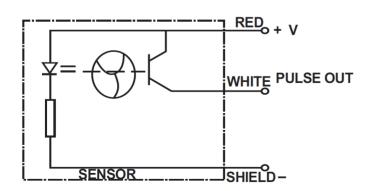

RECOMMENDATIONS FOR USING DIGIFLOW FLOWMETERS

- Check flow direction (arrow on the housing), fluid going in the opposite direction will not generate an output signal.
- Install a suitable filter in front of the sensor (see table for recommended pore size).
- De-aerate the system with a gentle flow before starting the system.
- · Check for leakages after starting the system.
- · Never clean the flowtube with compressed air.
- · Check chemical resistance of the wetted parts before use

